 


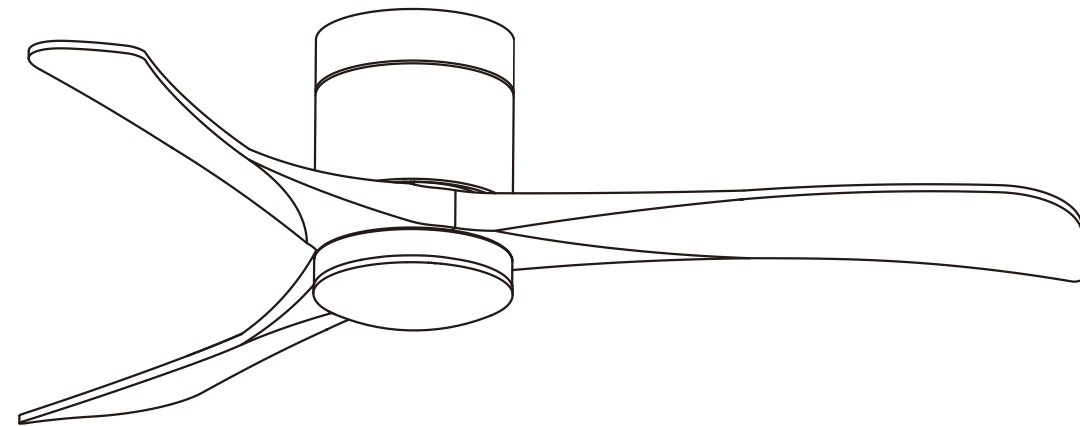

CEILING FAN

Installation Instruction

CONTACT INFORMATION

We want to hear your voice! Feel free to touch base if you encounter any issue when using our product(s) or want to know more about our brand We will be more than happy to provide top-notch pre-sales & after-sales service 25/1

SAFETY INFORMATION

Please read all safety information and instructions before installing the ceiling fan and save this manual for future reference.

CONTENTS

SAFETY INFORMATION	02
PRE-INSTALLATION	03
PARTS LIST	04
INSTALLATION INSTRUCTION	05
OPERATION INSTRUCTION	15
SPECIFICATIONS	16



 
SAFETY INFORMATION



WARNING

- Before connecting the power supply, make sure that the power supply used matches the specifications of the ceiling fan.
- All wiring must comply with national and local electrical codes ANSI/NFPA70. If you are not familiar with wiring, please use a qualified electrician.
- To reduce the risk of fire or electric shock, turn off the power to the fuse box or circuit breaker before installing the fan.
- To reduce the risk of personal injury, attach the fan directly to the building's support structure and ensure that it can accept at least 35 pounds (15.9 kg).
- Make sure that the installation location allows the fan blades to rotate without obstacles.

Installation Location

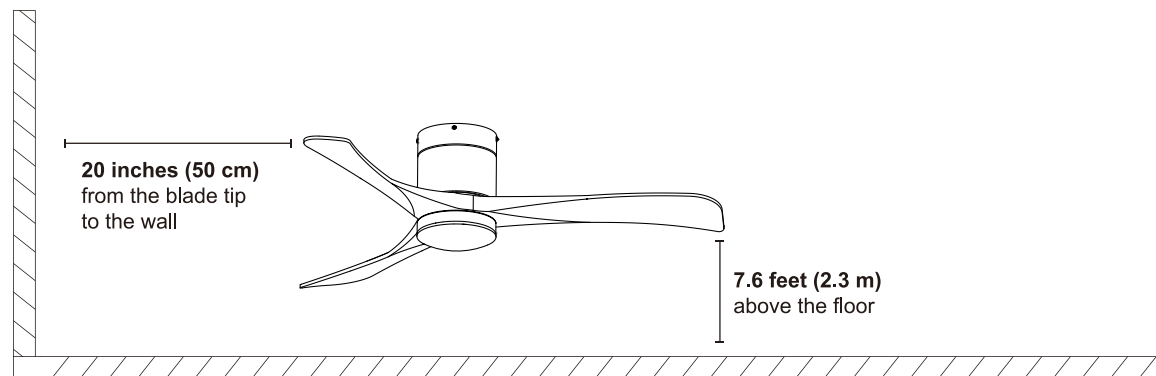


WARNING


- Do not install the fan with wet hands.
- Do not insert foreign objects between the rotating fan blades.
- Do not bend the fan blades when installing or cleaning the fan.
- Do not disassemble or modify this product or use non-original parts without permission.
- Keep children away from your working area.
- Properly dispose of the fan's packaging material.
- Make sure the ceiling fan is firmly secure to the ceiling. Double check all connections before you restore power.
- Turn off the fan and wait for the blades to stop completely before performing any maintenance or cleaning.

PRE-INSTALLATION

 Tools Required (Not Included)

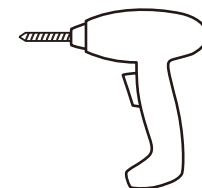

 
Power Drill
Mounting Bracket Installation

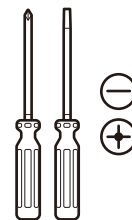


Screwdriver
Fan Blade Installation



 
Wire Stripper
Wiring Instruction

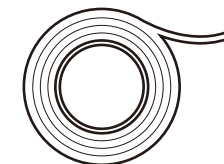

Electrical Tape
Wiring Instruction

 

 Battery X 2
Type:LR03 OR AAA
(Goes in the remote control)

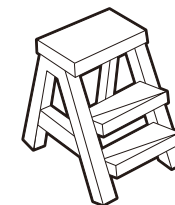


Step Ladder




Parts List



 
Motor x 1

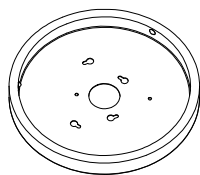


Light fixture frame x1

 

LED Module x1

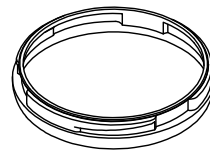 


Lamp shade x1

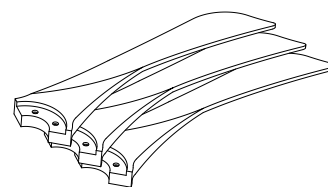 


Fan Blades x 3



 Expansion Bolts x4



Self-tapping Screws x 4

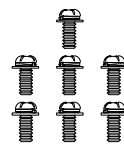 


Blade Screws x16




Remote Bracket Screws x2



 Balance Kits x 2

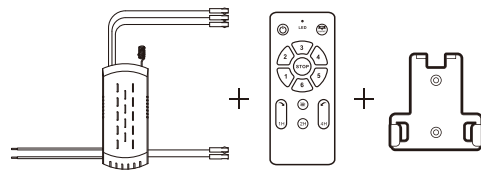

Receiver + Remote Control + Bracket x1

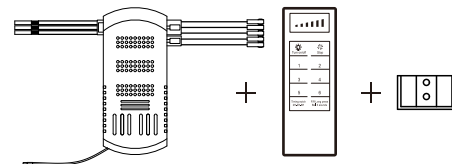 


Receiver + Remote Control + Bracket x1



INSTALLATION INSTRUCTION

 Step 1: Fan Blade Installation

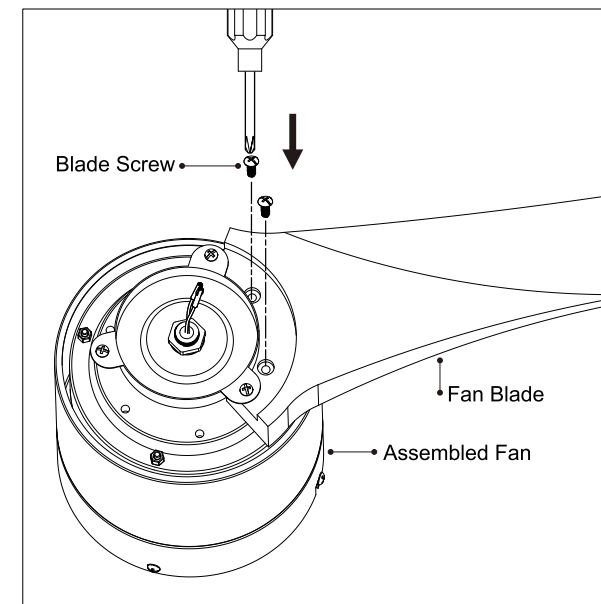


Fix the ceiling fan blade, align it with the center hole, and tighten the screws on the ceiling fan blade.



Note:

Install the fan fork label side up. (Facing the ceiling)

 
Step 2: Installation of Light fixture frame.

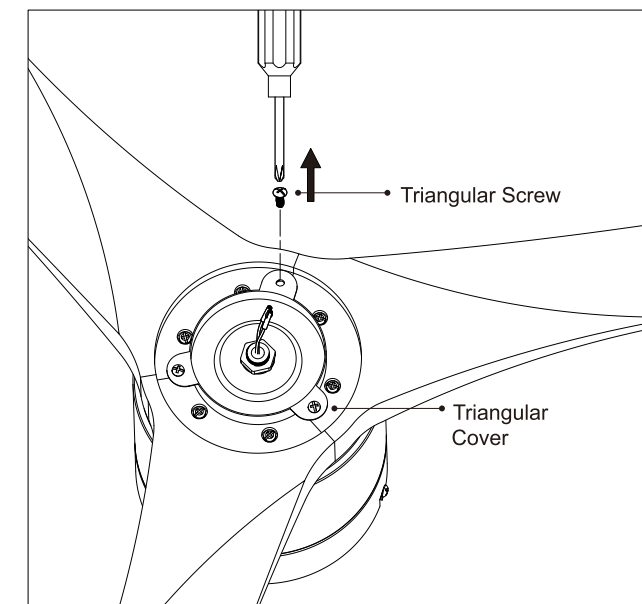

  
1 Loosen the screws of the upper triangular cover of the motor with an electric drill.

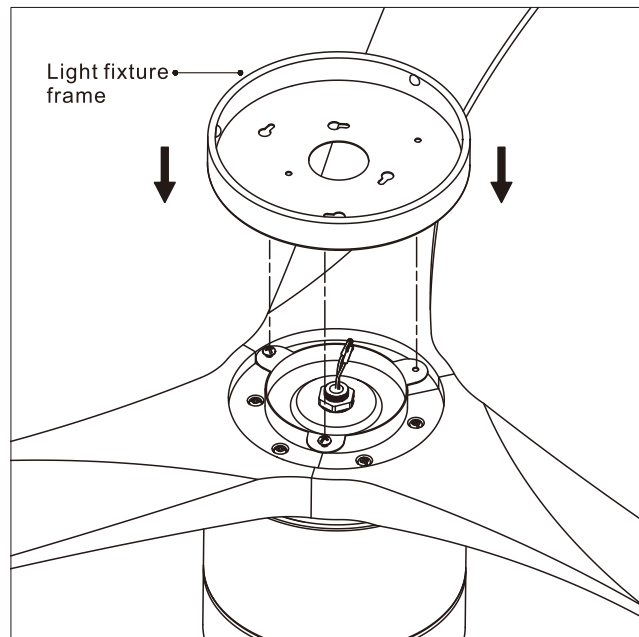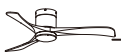


② Align the light fixture frame.

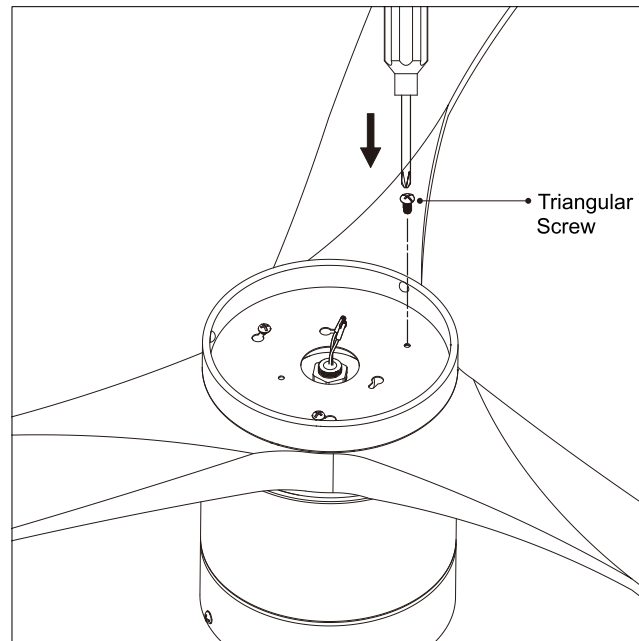 


 ③ Install the screws on the triangular cover into the corresponding holes.

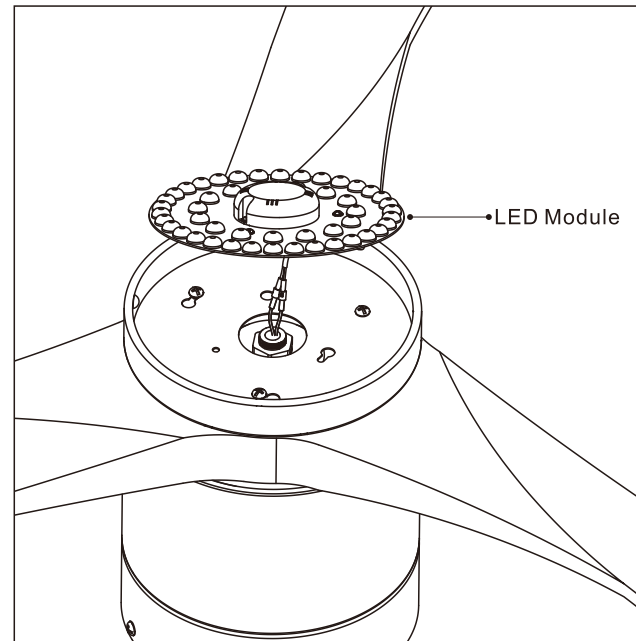


  ④ Connect the motor line and the LED module line.

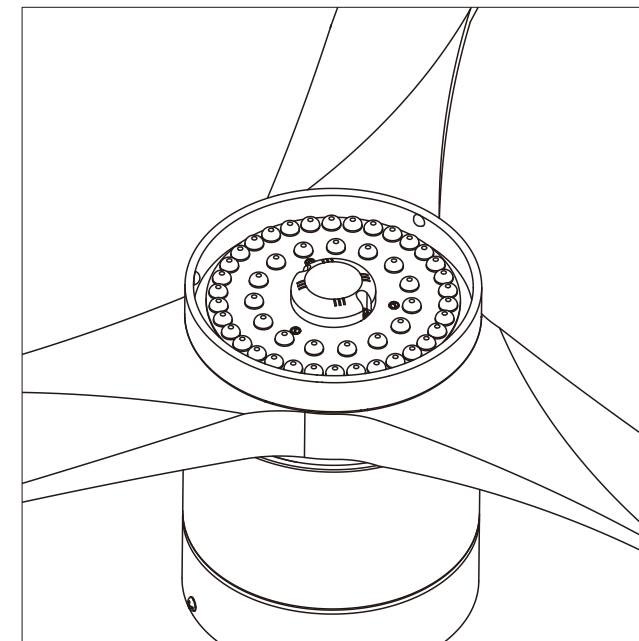


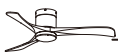

 Step 3: Mounting Bracket Installation

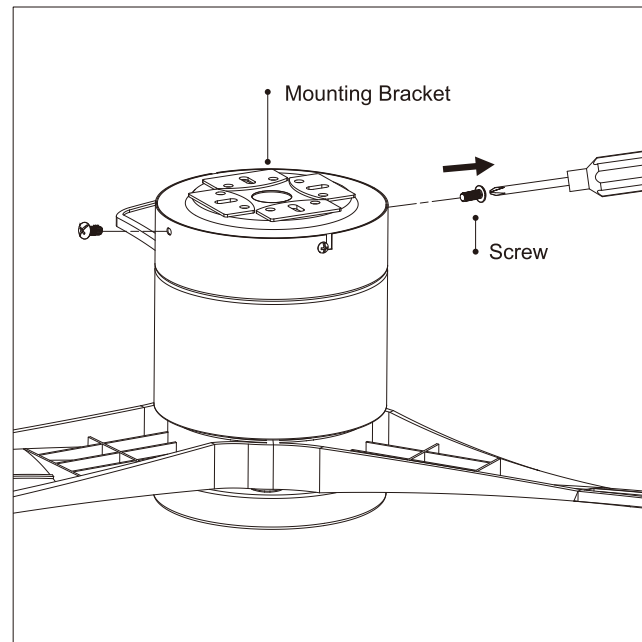


 
❶ Disassemble the screws on the mounting bracket.

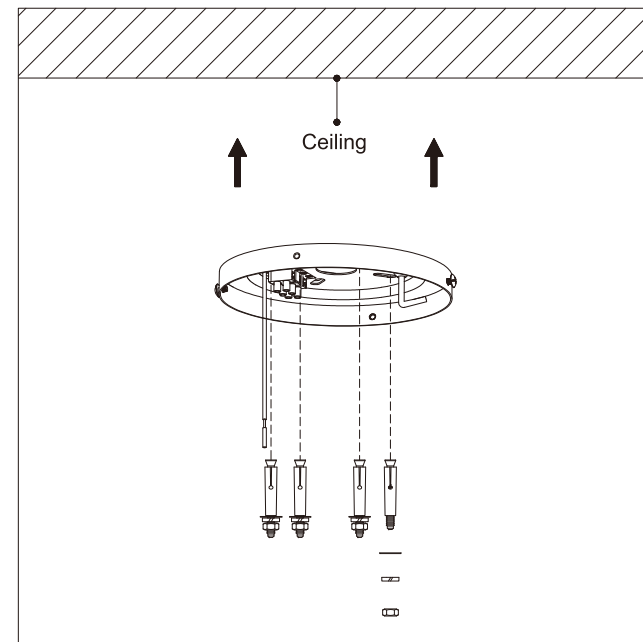


❷ Install the mounting bracket onto the ceiling.



   
Step 4: Mounting Bracket Installation

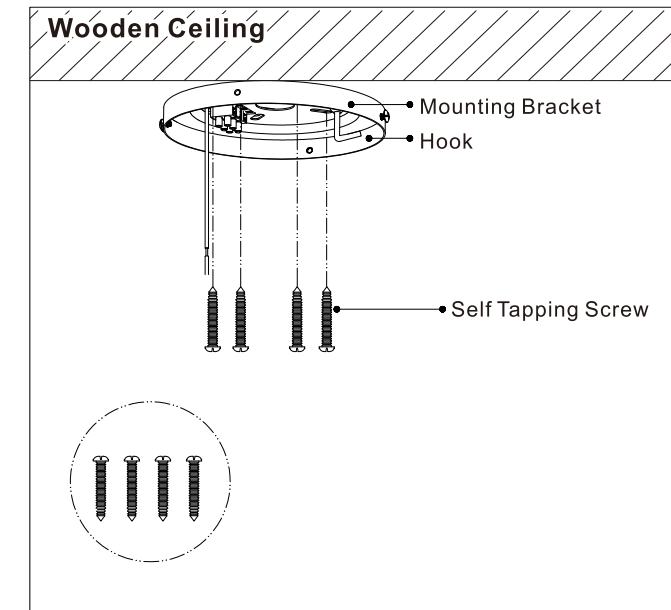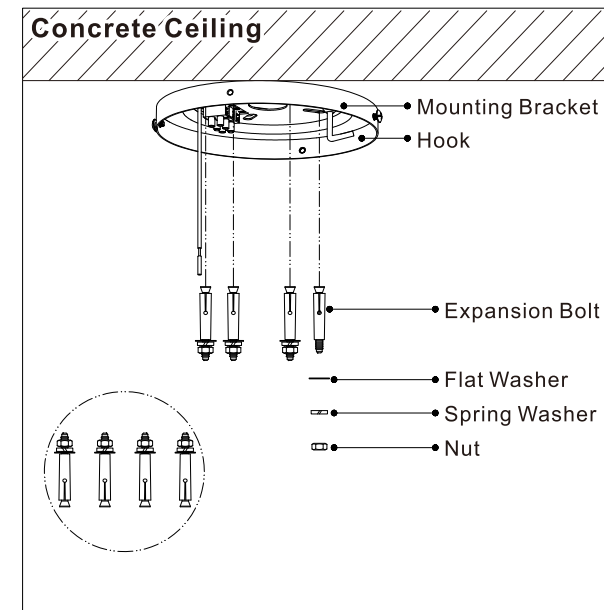

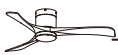

Step 5: Wiring Instruction

 
⚠ Shut off the power to the fuse box or circuit breaker before wiring

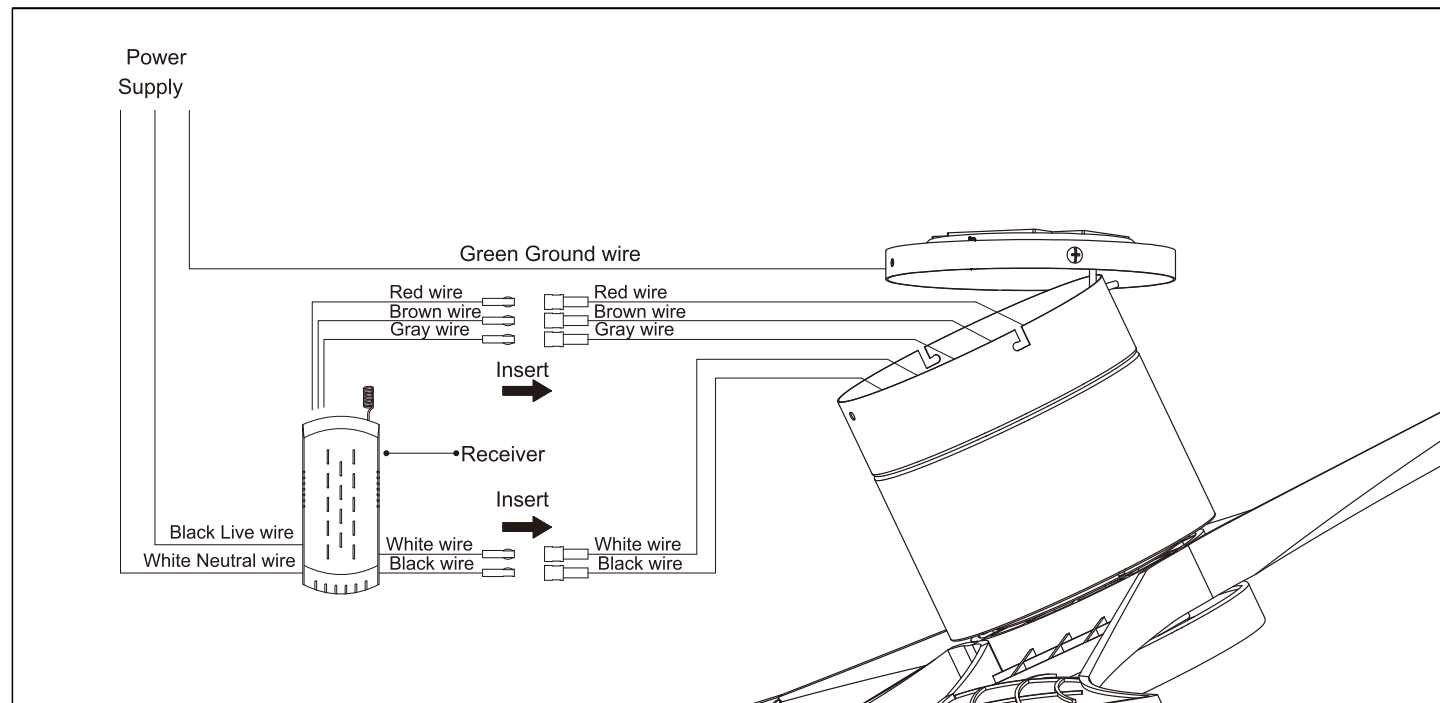


❶ The receiver is connected to the motor power cord and the ceiling power cord respectively.



 
Step 6: Put the controller into the ceiling cover

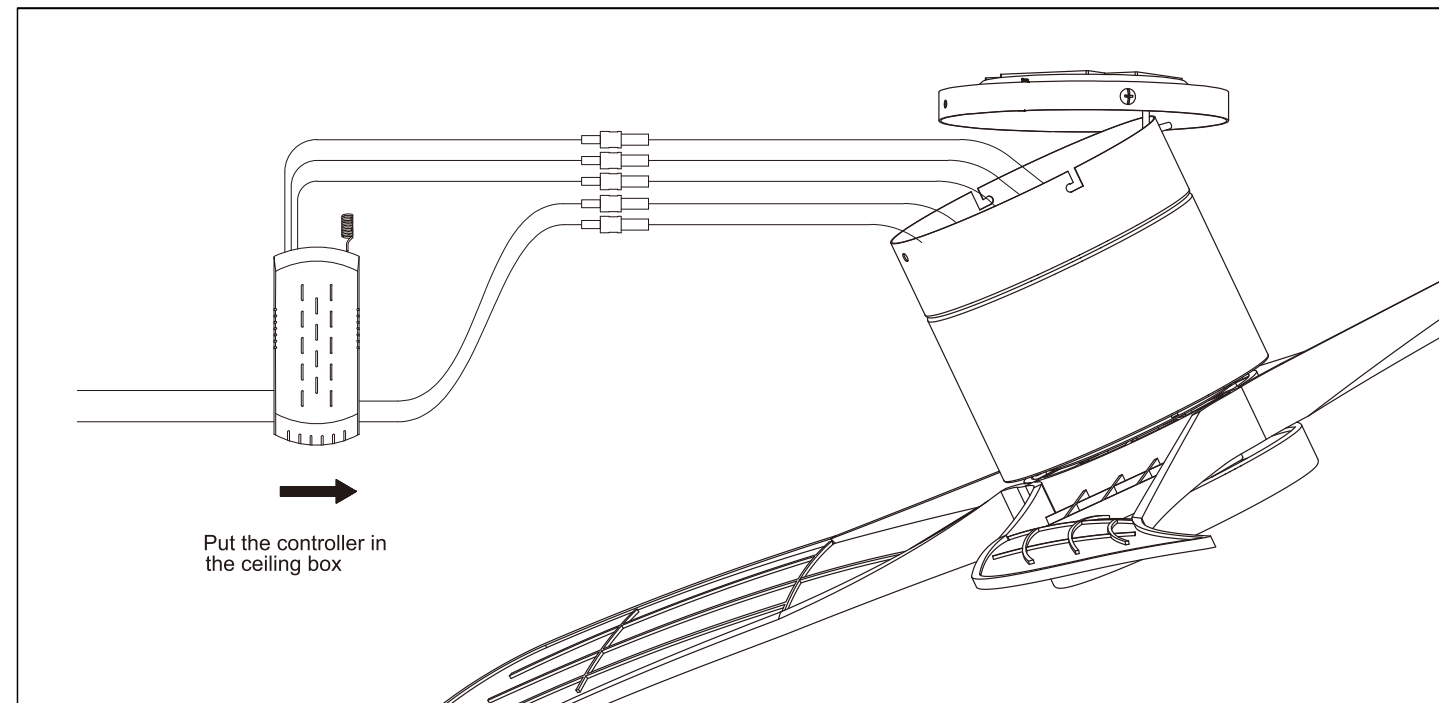


Put the controller in the ceiling box

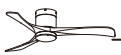 

 Step 7: Insert the main body into the card slot and rotate it


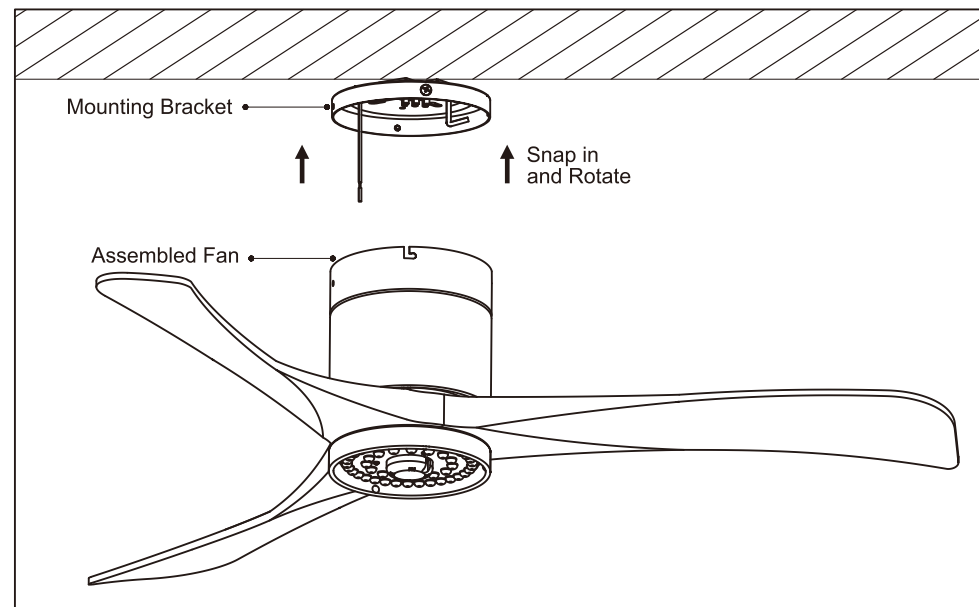


 Step 8: Tighten the screws on the mounting bracket.

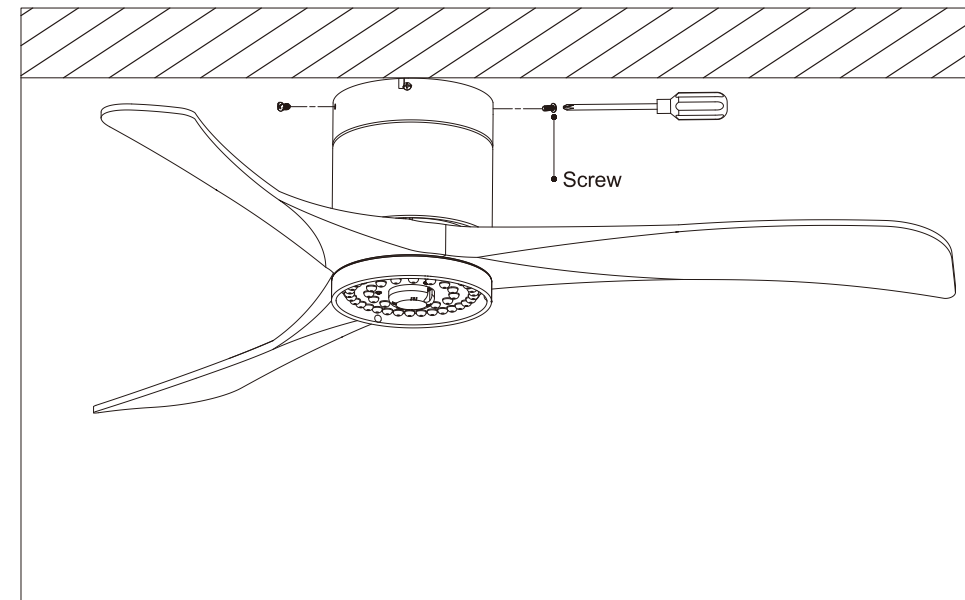



  
Step 9:Lamp Shade Installation.

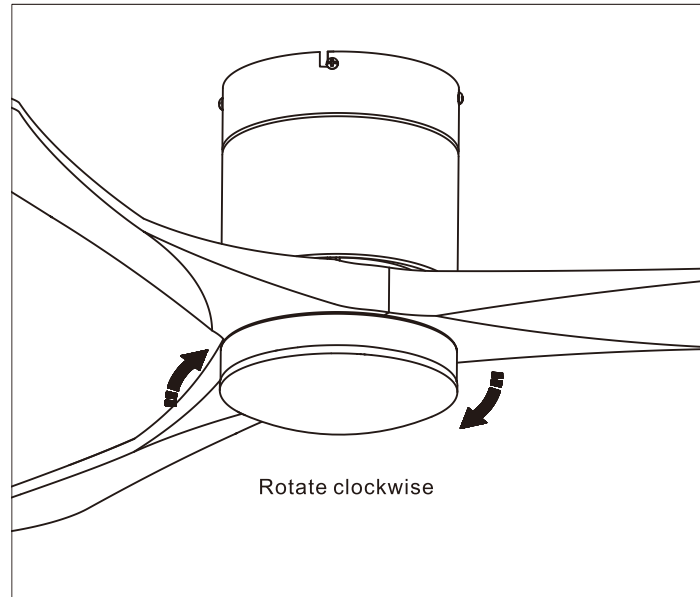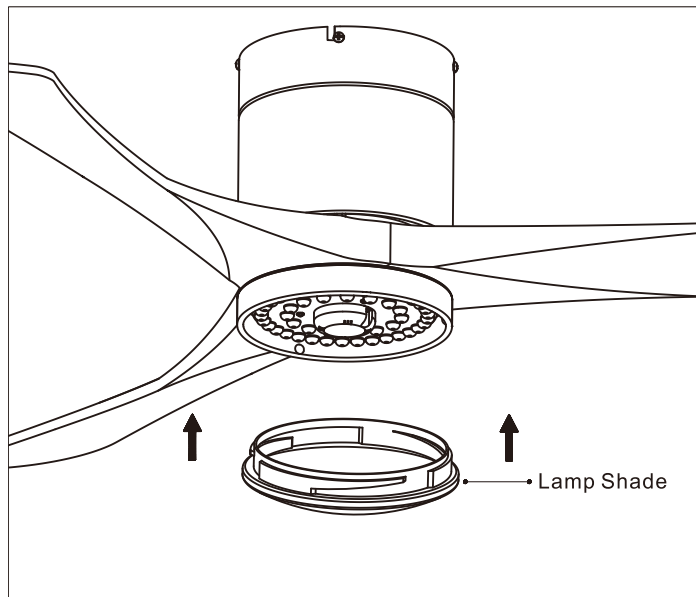

OPERATION INSTRUCTION

Solid wood style:56 inches

 Remote Control

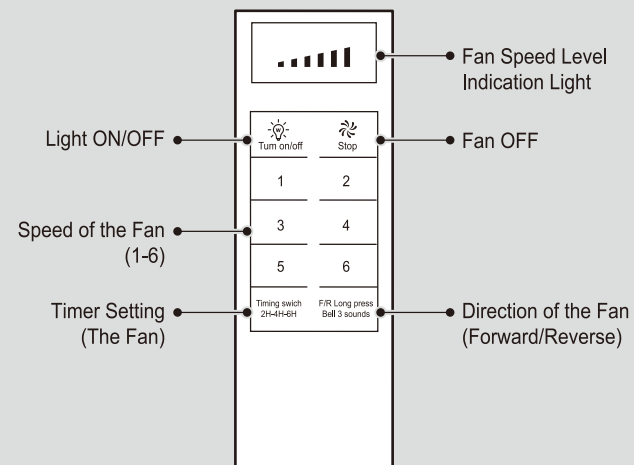


Code Matching for Remote Control:

1. Turn off the power for 10 seconds.
2. Turn on the power, and long press + button immediately.
3. After hearing 2 beep sounds like "didi", then the pairing successful.

Solid wood style:38/46/52 inches

 Remote Control

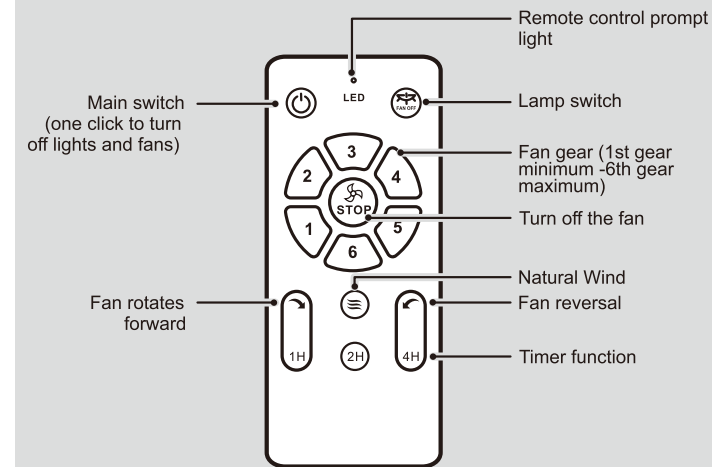


Code Matching of Receiver and Remote Control:

Turn off the power switch for 10 seconds and then turn it on again.
When you hear a beep, immediately press and hold the main power button and the light power button (the two buttons on the top of the remote) of the remote control without releasing them.
When you hear two beeps, pairing is successful.




Note :
Sensing Distance: 33 ft - 49 ft (10m -15m)
Direction of the fan / Reverse Switch.

 Reversible Function

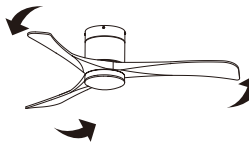

 Summer (Forward):
A downward airflow
creates a cooling
effect.

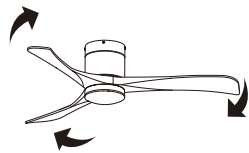

Winter (Reverse):
An upward airflow
increases the indoor
temperature.

 
PS: If you want to change the fan's rotation direction, please
press the button while the fan is running.

Timing Control
Solid wood style:56 inches
2H: The fan will automatically shut off after 2 hour.
4H: The fan will automatically shut off after 4 hours.
6H: The fan will automatically shut off after 6 hours.

Solid wood style:38/46/52 inches
1H: The fan will automatically shut off after 1 hour.
2H: The fan will automatically shut off after 2 hours.
4H: The fan will automatically shut off after 4 hours.

Close the Timing Control: Press the button  "FAN ON/OFF"

SPECIFICATIONS

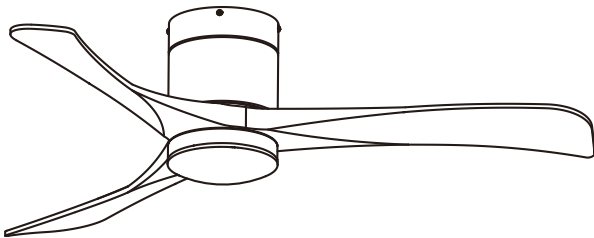

Product Name	38/46/52/56-Inch Ceiling Fan
Rated Voltage	110V-245V
Motor Power	30W/41W
control method	Remote Control
Lamp configuration	24W Bi-Color LED
lampshade size	Φ175mm
Fan blade	3ABS fan blades

TROUBLESHOOTING

If there is a problem with the fan during use, please check the following tips for solutions. If the problem still cannot be solved, please contact
our after-sales team.

The Fan Dose Not Respond to the Remote Control.

- Check that all wire connections are correct and secure.
- Verify that the power is turned on and reaching the receiver.
- Verify that the batteries of the remote control are installed with the correct polarity, making sure to install the + (positive) end of the batteries on the solid end and the - (negative) end on the spring.

The Fan Makes a Humming Noise.

- Make sure the controls you use are supplied with your fan.
- Make sure all accessories are securely fastened. Loose parts often cause a vibrating noise or buzzing sound.
- Disassemble the fan and reinstalling it can sometimes remedy this resonant vibrating noise.

The Fan Makes a Repetitive Ticking Noise.

- Check for obstructions in the rotor path.
- Make sure mounting hardware at the ceiling is firmly fasten.
- Make sure all other hardware and blade attachments are tight.
- Give the fan a "Break in Period" of a few hours to a few days, then repeat the steps above.

The Fan Wobbles.

- Make sure the mounting plate and hardware at the ceiling are firmly fastened.
- Make sure all screw fittings on the fan are tight.
- If necessary, use the self-tapping screws provided to further secure the bracket to the joist.

